

Manual - Oil Leak Stop Kit



1. Oilfilters come with various threads, therefore this kit comes with the 10 most used Connection-Adapters. Choose the one that fits to the filter you want to test. The Oilfilter threadsize is usually written on the body of the filter.

2. Now you have to screw the Connector (1) into the spacing (2) Than screw the filter to the Connector, firmly by hand.

3. In order to test the filter you need to attach a Compressor to the Connector (3)

4. The standard test procedure requires you to increase the oil filter pressure to 4 Bar and keep it for 10 seconds. Oilfilter leakage can be recognized by a pressure drop on the Barometer (4)

This Kit was developed to test oil and fuel filters for leakage. Oil Leak Stop Kit works using air compressor, folding car air pump or simple bicycle hand pump. This can be helpful when explaining technical details to clients, when facing complaints of customers and in many more cases.